




INSTRUCTION FOR LUMINAIRE MAINTENANCE

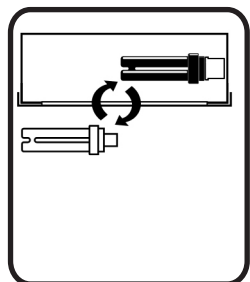


Replace aged or failed lamp

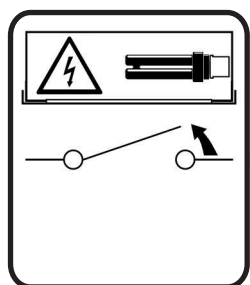


Switch off power supply.

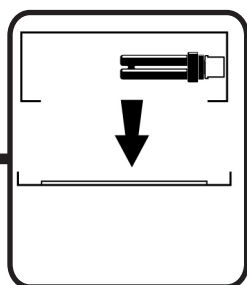


Open luminaire.

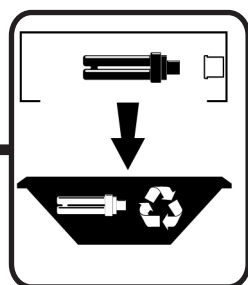


Remove old lamp.
Dispose for recycling.

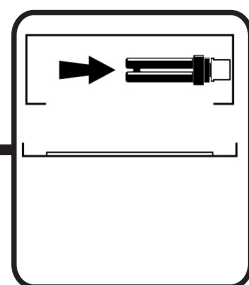

Fit new lamp. Insert new
lamp into lamp holder.

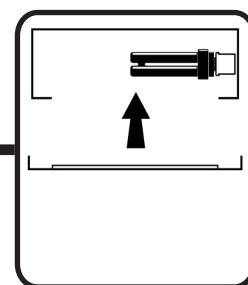

Refit cover.

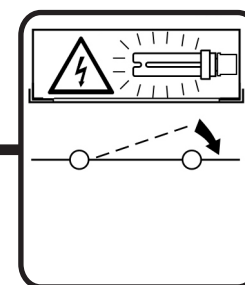

Make function test.